
PLANAR TR1300/1

Vector Network Analyzer



TECHNOLOGIES

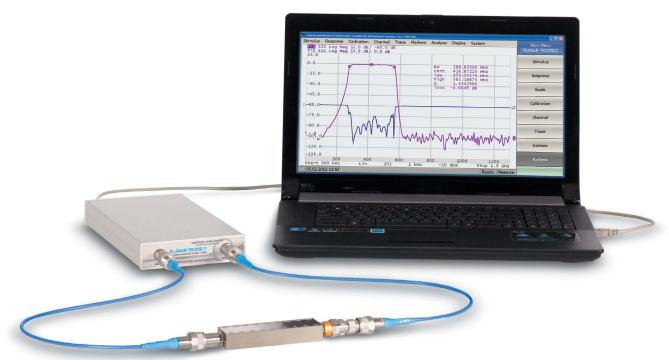

KEY FEATURES

- ► Frequency range: 300 kHz 1.3 GHz
- ► Measured parameters: S11, S21
- ▶ Wide output power adjustment range: -55 dBm to +3 dBm
- ►>130 dB dynamic range
- ▶ Up to 4 logical channels with 8 traces each
- ► COM/DCOM compatible for LabView and automation programming

- ► Time domain and gating conversion included
- ► Fixture simulation
- ► Frequency offset mode, including vector mixer calibration measurements
- ▶ Up to 10,001 measurement points
- ► Measurement time per point: 150 µs per point ► Multiple precision calibration methods and automatic calibration



Real Performance, Real Value.

Advanced

CMT analyzers take advantage of breakthrough advances in RF technology as well as the faster processing power, larger display, and more reliable performance of an external PC, while also simplifying maintenance of the analyzer.


Accurate

Our VNAs are made with high standards. Every instrument is lab-grade quality, with a wide dynamic range, low noise floor, high resolution sweep, and a variety of other advanced features. The metrology of the Planar TR1300/1 delivers real measurement accuracy and reliability.

Cost Effective

CMT VNAs are flexible, easy to maintain, and are well-suited for lab, production, field, and secure testing environments. With every bit of performance of traditional analyzers, but at a fraction of the cost, now every engineer and technician can have a highly accurate VNA.




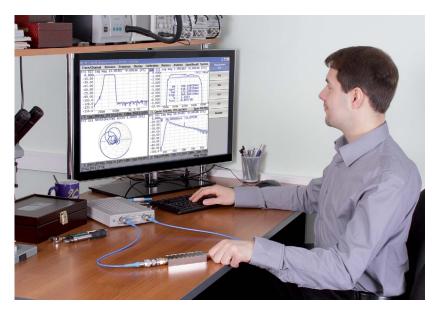


The Planar TR1300/1 VNA is an S-parameter vector network analyzer designed for operation with an external PC. It connects to any Windows-based computer via USB and delivers accurate testing and measurement through a platform that can keep up with constant advancements as well as be remotely accessed.


Planar TR1300/1 is designed for use in the process of development, adjustment and testing of various electrnonic devices in industrial and laboratory facilities, including operation as a component of an automated measurement system. Planar TR1300/1 is designed for operation with an external PC (not supplied with the analyzer). The following product brochure outlines the various features that are standard on the device. To learn more about the software functions and capabilities, download our demo software from the CMT website.

Front Panel

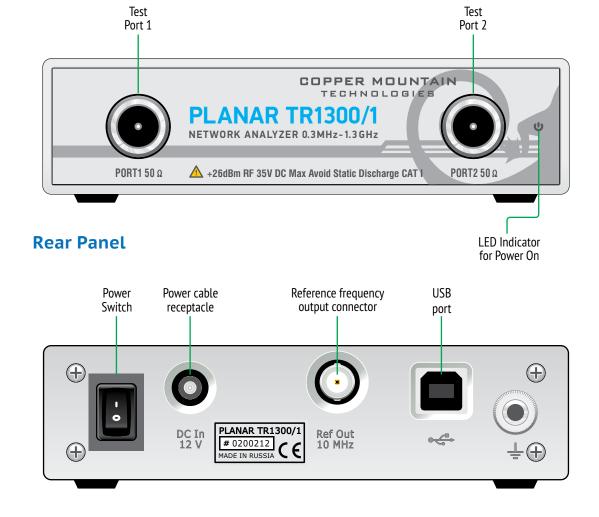

Measurement Capabilities

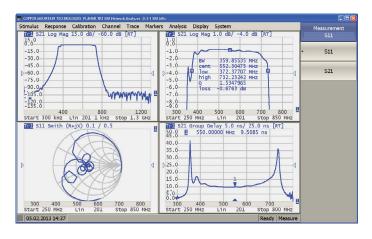

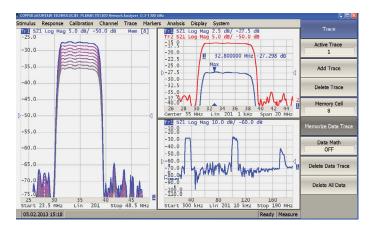

Measured parameters

S₁₁, S₂₁

Number of measurement channels

Up to 4 independent logical channels: each logical channel is represented on the screen as an individual channel window. A logical channel is defined by such stimulus signal settings as frequency range, number of test points, or power level.

Data traces

Up to 8 data traces can be displayed in each channel window. A data trace represents one of such parameters of the DUT as S-parameters, response in time domain, or input power response.


Memory traces

Each of the 8 data traces can be saved into memory for further comparison with the current values.

Data display formats


Logarithmic magnitude, linear magnitude, phase, expanded phase, group delay, SWR, real part, imaginary part, Smith chart diagram and polar diagram display formats are available.

Dynamic Range

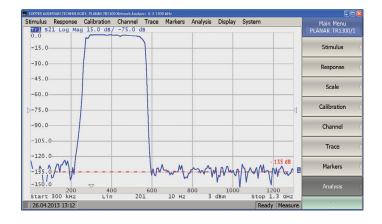

Typical dynamic range of 135 dB is achieved through the entire frequency range (at 10 Hz IF bandwidth). Seen here is the maximum dynamic range achieved when using IFBW 10 Hz and an output power level of 3 dBm.

Sweep Features

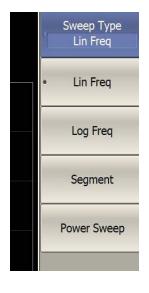

Sweep type

Linear frequency sweep, logarithmic frequency sweep, and segment frequency sweep occur when the stimulus power is a fixed value. Linear power sweep occurs when frequency is a fixed value.

Measured points per sweep

Set by the user from 2 to 10,001.

Segment sweep features

A frequency sweep within several independent user-defined segments. Frequency range, number of sweep points, source power, and IF bandwidth should be set for each segment.

Power

Source power from -55 dBm to +3 dBm with resolution of 0.05 dB. In frequency sweep mode, the power slope can be set to up to 2 dB/GHz for compensation of high frequency attenuation in connection wires.

Sweep trigger

Trigger modes: continuous, single, or hold. Trigger sources: internal, manual, external, bus.

Trace Functions



Trace display

Data trace, memory trace, or simultaneous indication of data and memory traces.

Trace math

Data trace modification by math operations: addition, subtraction, multiplication or division of measured complex values and memory data.

Autoscaling

Automatic selection of scale division and reference level value allow the most effective display of the trace.

Electrical delay


Calibration plane moving to compensate for the delay in the test setup. Compensation for electrical delay in a device under test (DUT) during measurements of deviation from linear phase.

Phase offset

Phase offset is defined in degrees.



Frequency Scan Segmentation

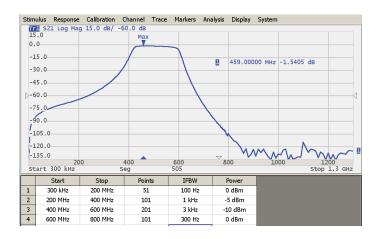

The VNA has a large frequency range with the option of frequency scan segmentation. This allows optimal use of the device, for example, to realize the maximum dynamic range while maintaining high measurement speed.


Power Scanning and Compression Point Recognition



The power sweep feature turns compression point recognition, one of the most fundamental and complex amplifier measurements, into a simple and accurate operation.



Mixer/Converter Measurements

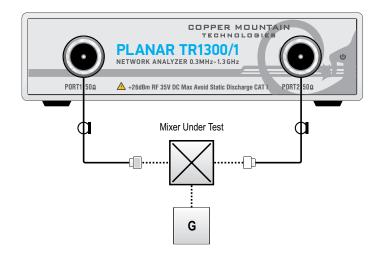


Scalar mixer / converter measurements

The scalar method allows the user to measure only the magnitude of the transmission coefficient of the mixer and other frequency translating devices. No external mixers or other devices are required. The scalar method employs port frequency offset when there is a difference between the source port frequency and the receiver port frequency.

Scalar mixer / converter calibration

This is the most accurate method of calibration applied for measurements of mixers in frequency offset mode. The OPEN, SHORT, and LOAD calibration standards are used. An external power meter should be connected to the USB port directly or via USB/GPIB adapter.

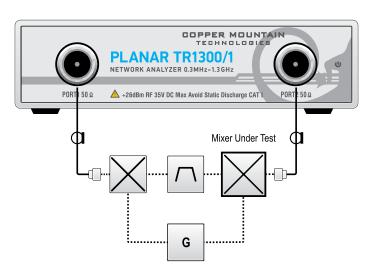


Vector mixer / converter measurements

The vector method allows the measurement of both the magnitude and phase of the mixer transmission coefficient. This method requires an external mixer and an LO common for both the external mixer and the mixer under test.

Vector mixer /converter calibration

This method of calibration is applied for vector mixer measurements. OPEN, SHORT and LOAD calibration standards are used.

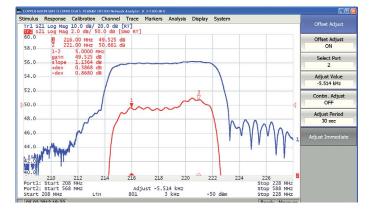

Automatic frequency offset adjustment


The function performs automatic frequency offset adjustment when the scalar mixer / converter measurements are performed to compensate for internal LO setting inaccuracy in the DUT.


Time Domain Measurements




Here, built-in time domain analysis allows the user to detect a physical impairment in the antenna feeder.

This function performs data transformation from frequency domain into response of the DUT to various stimulus types in time domain. Modeled stimulus types: bandpass, lowpass impulse, and lowpass step. Time domain span is set by the user arbitrarily from zero to maximum, which is determined by the frequency step. Windows of various forms are used for better tradeoff between resolution and level of spurious sidelobes.

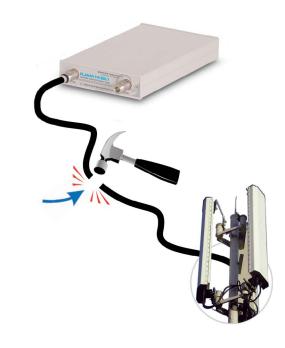


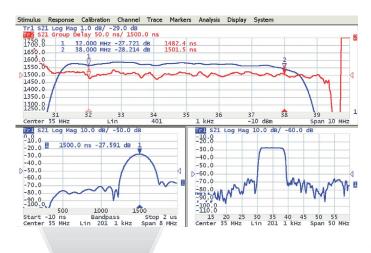

Time domain analysis allows measurement of parameters of SAW filters such as the signal time delay, feedthrough signal suppression.

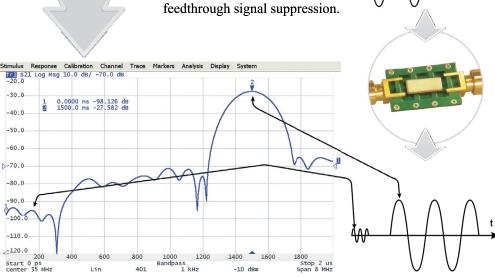

Time Domain Gating

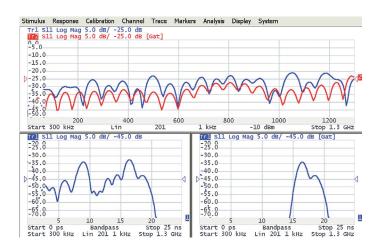


This function mathematically removes unwanted responses in the time domain, which allows the user to obtain frequency response without influence from fixture elements.

This function applies reverse transformation back to the frequency domain after cutting out the user-defined span in time domain. Gating filter types: bandpass or notch. For a better tradeoff between gate resolution and level of spurious sidelobes the following filter shapes are available: maximum, wide, normal and minimum.


Applications of these features include, but are not limited to: measurement of SAW filter parameters, such as filter time delay or forward transmission attenuation.

Limit Testing

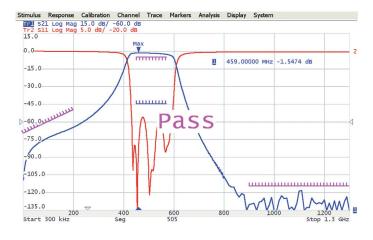


Limit testing is a function of automatic pass/fail judgment for the trace of the measurement results. The judgment is based on the comparison of the trace to the limit line set by the user and can consist of one or several segments.

Each segment checks the measurement value for failing either the upper or lower limit, or both. The limit line segment is defined by specifying the coordinates of the beginning (X0, Y0) and the end (X1, Y1) of the segment, and type of the limit. The MAX or MIN limit types check if the trace falls outside of the upper or lower limit, respectively.

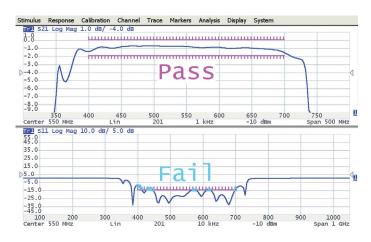


Embedding

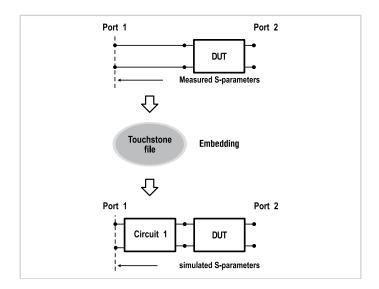


This function allows the user to mathematically simulate DUT parameters by virtually integrating a fixture circuit between the calibration plane and the DUT. This circuit should be described by an S-parameter matrix in a Touchstone file.

De-Embedding

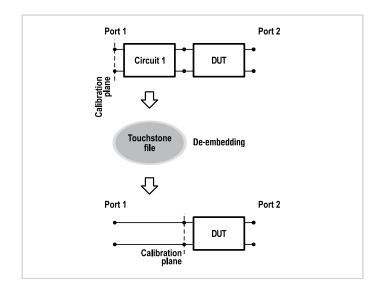

This function allows the user to mathematically exclude the effect of the fixture circuit connected between the calibration plane and the DUT from the measurement results. This circuit should be described by an S-parameter matrix in a Touchstone file.

Port Impedance Conversion

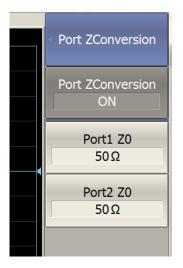

This function converts the S-parameters measured at the 50 Ω port into values, which could be determined if measured at a test port with arbitrary impedance.

S-Parameter Conversion



The function allows conversion of the measured S-parameters to the following parameters: reflection impedance and admittance, inverse S-parameters, and conjugation.

Data Output



Analyzer State

All state, calibration and measurement data can be saved to an Analyzer state file on the hard disk and later uploaded back into the software program. The following three types of saving are available: State, Calibration, and State & Calibration.

The program allows the user to save the current state configuration for further recall. A state configuration includes signal source parameters, data traces, memory traces, markers, calibration, etc.

Trace Data CSV File

The Analyzer allows the use to save an individual trace data as a CSV file (comma separated values). The active trace stimulus and response values in current format are saved to *.CSV file. Only one trace data are saved to the file.

Trace Data Touchstone File

The Analyzer allows the user to save S-parameters to a Touchstone file. The Touchstone file contains the frequency values and S-parameters. The files of this format are typical for most of circuit simulator programs. The *.s2p files are used for saving the S11 and S21 parameters of a 2-port, 1-path device. The *.s1p files are used for saving S11 and S22 parameters of a 1-port device. Only one (active) trace data are saved to the file. The Touchstone file saving function is applied to individual active channels.



Screenshot capture

The print function is provided with the preview feature, which allows the user to view the image to be printed on the screen, and/or save it to a file. Screenshots can be printed using three different applications: MS Word, Image Viewer for Windows, or the Print Wizard of the Analyzer. Each screenshot can be printed in color, grayscale, black and white, or inverted for visibility or ink use. The current date and time can be added to each capture before it is transferred to the printing application, resulting in quick and easy test reporting.

Measurement Automation



COM/DCOM compatible


Planar TR1300/1 software is COM/DCOM compatible, which allows the unit to be used as a part of an ATE station and other special applications. COM/DCOM automation is used for remote control and data exchange with the user software

The Analyzer program runs as COM/DCOM server. The user program runs as COM/DCOM client. The COM client runs on Analyzer PC. The DCOM client runs on a separate PC connected via LAN.

LabView compatible

The device and its software are fully compatible with LabView applications, for ultimate flexibility in user-generated programming and automation.

Accuracy Enhancement

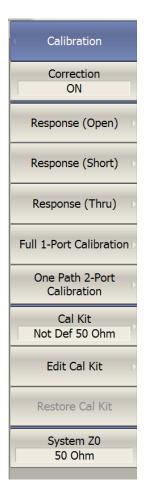

Calibration

Calibration of a test setup (which includes the VNA, cables, and adapters) significantly increases the accuracy of measure-ments. Calibration allows for correction of the errors caused by imperfections in the measurement system: system directivity, source and load match, tracking and isolation.

Calibration methods

The following calibration methods of various sophistication and accuracy enhancement level are available:

- ► reflection and transmission normalization
- ▶ full one-port calibration
- ▶ one-path two-port calibration

Reflection and transmission normalization

This is the simplest calibration method; however, it provides reasonably low accuracy compared to other methods.

Factory calibration

The factory calibration of Planar TR1300/1 allows for reduction of measurement error in reflection and transmission normalization.

Full one-port calibration

Method of calibration performed for one-port reflection measurements. It ensures high accuracy.

One-path two-port calibration

Method of calibration performed for reflection and one-way transmission measurements, for example for measuring S11 and S21 only. It ensures high accuracy for reflection measure-ments, and mean accuracy for transmission measurements.

Mechanical Calibration Kits

The user can select one of the predefined calibration kits of various manufacturers or define own calibration kits.

Electronic Calibration Modules

Electronic, or automatic, calibration modules offered by CMT make the analyzer calibration faster and easier than traditional mechanical calibration.

Defining calibration standards

Different methods of calibration standard defining are available:

- ▶ standard defining by polynomial model
- ▶ standard defining by data (S-parameters)


Error correction interpolation

When the user changes any settings such as the start/stop frequencies and number of sweep points, compared to the settings at the moment of calibration, interpolation or extrapolation of the calibration coefficients will be applied.

Supplemental Calibration Methods

Power calibration

Power calibration allows more stable maintainance of the power level setting at the DUT input. An external power meter should be connected to the USB port directly.

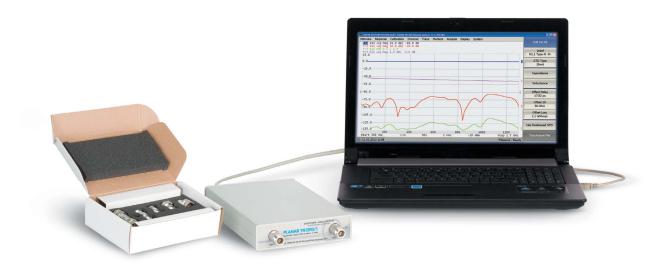

N1.1 Calibration Kit

The N1.1 calibration kit is suitable for calibration of the Planar TR1300/1 and other vector network analyzers in the frequency range up to 1.5 GHz. While the VNA can be used with any calibration kit on the market suitable for its specifications, the N1.1 is recommended as an economy option for basic calibration.

TECHNICAL SPECIFICATIONS

MEASUREMENT RANGE

Impedance 50Ω (75 Ω connectors via adapters)

Test port connector N-type, female

Number of test ports

Frequency range 300 kHz to 1.3 GHz

 $\pm 5 \times 10^{-6}$ Full CW frequency accuracy

Frequency setting resolution 1 Hz

Number of measurement points 2 to 10,001

> Measurement bandwidth 10 Hz to 30 kHz (with 1/3 step)

Dynamic range (IF bandwidth 10 Hz) 130 dB, typ. 135 dB

MEASUREMENT ACCURACY

Accuracy of transmission measurements (magnitude / phase)¹

+10 dB to +13 dB | 0.2 dB / 2°

-50 dB to +10 dB | 0.1 dB / 1°

-70 dB to -50 dB | 0.2 dB / 2°

-90 dB to -70 dB | 1.0 dB / 6°

Accuracy of reflection measurements (magnitude / phase)1

-15 dB to 0 dB | 0.4 dB / 4°

-25 dB to -15 dB | 1.5 dB / 7°

-35 dB to -25 dB | 4.0 dB / 22°

Trace stability

Trace noise magnitude 0.002 dB rms

(IF bandwidth 3 kHz)

Temperature dependence

0.02 dB (per one degree of temperature variation)

EFFECTIVE SYSTEM DATA¹

Effective directivity 45 dB

Effective source match | 40 dB

TEST PORT

Directivity (without system error correction) 18 dB

TEST PORT OUTPUT

Match (without system error correction) 18 dB

 $^{^{1}}$ applies over the temperature range of 73°F \pm 9 °F (23°C \pm 5 °C) after 40 minutes of warming-up, with less than 1 °C deviation from the one-path two-port calibration temperature, at output power of -10 dBm, and 10 Hz IF bandwidth.

Power range | -55 dBm to +3 dBm

Power accuracy ±1.5 dB

Power resolution | 0.05 dB

TEST PORT INPUT

Match

28 dB

Damage level

+26 dBm

Damage DC voltage

35 V

Noise level (defined as the rms value

of the specified noise floor, IF bandwidth 10 Hz)

-127 dBm

MEASUREMENT SPEED

Measurement time per point 150 µs

GENERAL DATA

Output reference signal

Output reference signal level at 50 Ω impedance

 $3 dBm \pm 2 dB$

«OUT 10 MHz» connector type BNC female

Atmospheric tolerances

Operating temperature range | +41 °F to +104 °F (+5 °C to +40 °C)

Storage temperature range | -49 °F to +131 °F (-45 °C to +55 °C)

Humidity 90% at 77 °F (25 °C)

Atmospheric pressure 84 to 106.7 kPa

Calibration Frequency

Calibration interval 3 years

External PC system requirements

Operating system Windows XP, Vista, 7, 8

CPU frequency 1 GHz

RAM 512 MB

Power supply

Power supply AC circuit (via adapter) 110-240 V, 50/60 Hz

Power consumption AC circuit

10 W

Power supply, external DC

9-15 V

Power consumption, external DC

8 W

Dimensions (L x W x H) 11.2 x 5.6 x 1.6 in

Weight | 3.3 lbs (1.5 kg)



For a complete listing of our global sales network, please visit www.coppermountaintech.com